

Nokia Bluetooth Headset BH-218 User Guide

About your headset

With the Nokia Bluetooth Mono Headset BH-218, you can handle calls more easily than ever. To answer a call, just pick up the earpiece and talk. The headset automatically switches on, connects to your phone, and answers the call.

The surface of this product is nickel-free.

Warning:

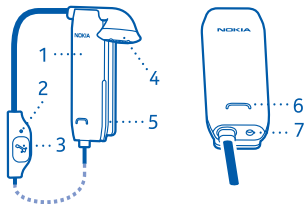
This product may contain small parts. Keep them out of the reach of small children.



Parts of the product are magnetic. Metallic materials may be attracted to the product. Do not place credit cards or other magnetic storage media near the product, because information stored on them may be erased.

Read this user guide carefully before using the product. Also, read the user guide for the device that you connect to the product.

For more info, go to www.nokia.com/support.

Keys and parts

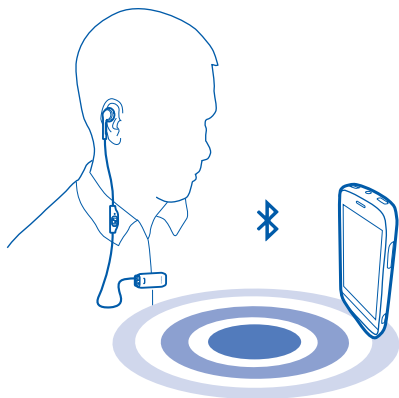


- 1 Earpiece holder with indicator light
- 2 Microphone
- 3 Mute switch 
- 4 Earpiece
- 5 Clip
- 6 Multifunction key 
- 7 Charger connector

About Bluetooth connectivity

You can use Bluetooth to make a wireless connection to other compatible devices, such as mobile phones.

Devices do not need to be in direct line-of-sight, but they must be within 10 metres (33 feet) of each other. The connection may be affected by obstructions such as walls or other electronic devices.



This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles: headset profile (1.1) , handsfree profile (1.5). Check with the manufacturers of other devices to determine their compatibility with this device.

Charge the battery

Before using the headset, you must charge the battery.

Warning:

Use only chargers approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. Use of unapproved chargers may present a risk of fire, explosion, or other hazard.


- 1 Plug the charger into a wall outlet.
- 2 Connect the charger cable to the charger connector on the headset. The red indicator light turns green when the battery is fully charged.
- 3 Disconnect the charger from the headset, then from the wall outlet.

When you unplug a charger, hold and pull the plug, not the cord.

The fully charged battery has power for up to 8 hours of talk time and up to 150 hours of standby time. If you keep the earpiece in the holder, the standby time is up to 3 months.

When the battery charge is low, the headset beeps every 5 minutes, and the red indicator light flashes. If the voice prompts are on, you also hear the battery level. When the battery is charging, the red indicator light is on.

Check the battery charge

Make sure the headset is switched on, then press . A green light means there is enough power. If the light is yellow, you may need to recharge the battery soon. If the light is red, recharge the battery.

Switch the headset on or off

Switch on

Remove the earpiece from the holder. The headset beeps, and a green indicator light flashes.

If you've never paired the headset with a phone, or you've cleared the pairings, pairing mode is switched on. Pair and connect the headset with your phone within 3 minutes.

 
If you've paired the headset before, it connects to the last phone it was used with. If the headset can't find that phone, it tries the next phone on its list of paired devices. If not connected to a phone within 30 minutes, the headset switches off.

Switch off

Put the earpiece back into the holder. The headset beeps, and a red indicator light flashes once. All calls are ended.

Pair and connect the headset to your phone

Before using the headset, you must pair and connect it to a compatible phone.

- 1 Make sure your headset is switched off and your compatible phone is on.
- 2 If you've never paired the headset with a device, or you've cleared the pairings, switch the headset on.
If you've previously paired your headset with another device, press and hold  for 5 seconds.
Pairing mode is switched on, and a blue indicator light starts to flash quickly.

- 3 Within 3 minutes, switch Bluetooth on in your phone, then set it to search for Bluetooth devices. For details, see the user guide of the phone.
- 4 On your phone, select the headset from the list of found devices.
- 5 If asked, type in the passcode **0000**.

When the headset is connected to a phone, the Bluetooth indicator light flashes slowly.

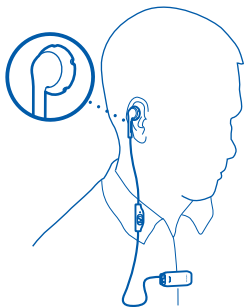
You can pair your headset with 8 phones, but you can only connect it to 2 phones at the same time.

With some phones, you may need to make the connection separately after pairing.

Tip: Can't connect the headset to a compatible phone? Make sure that the headset is charged, switched on, and paired with the phone.

Wear the headset

To use the headset, pull the earpiece from the holder, then push it gently into your ear. The headset switches on automatically.



When you're not using your headset, keep the earpiece in the holder. Press the earpiece firmly into the holder so it stays in place. The headset switches off automatically.

Tip: Have your headset always at hand – clip it to your pocket as you would a pen.

Your headset comes with different-sized earpads. Select the earpad that fits the best, and is the most comfortable for your ear.

Change the earpad

Pull the current earpad from the earpiece, then push the new earpad into place.

Change the volume

Set the volume on your phone. That volume is used as the minimum level – if the background noise where you are increases or decreases, the headset changes the volume to compensate.

Make and receive calls

 
To make and receive calls using your headset, you need to connect it to your phone.

Make a call

Make a call in the normal way.


Answer a call

Remove the earpiece from the holder.

Tip: If the earpiece is not in the holder, press .

End a call

Put the earpiece in the holder.

Tip: To end a call, you can also press .


Decline a call

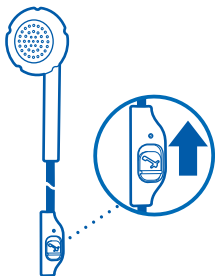
Press  twice, or put the earpiece back into the holder.

Switch a call between your headset and phone

Press and hold  for 2 seconds.

Mute or unmute your microphone

Slide . The microphone is muted when the red colour shows.

 


When you're not in a call and the earpiece is not in the holder, you can redial the last called number or use voice dialling, if your phone supports these features with the headset.

Redial the last called number


 
Press  twice.

Use voice dialling

Press and hold  for 2 seconds, then follow the instructions in the user guide of your phone.

Pair and connect the headset to two devices

When you have paired and connected your headset with one phone, you can connect your headset to another phone, and manage calls from, for example, both your personal and your work phone at the same time.

- 1 Make sure Bluetooth is switched on in both phones.
- 2 To switch the headset off, press and hold  for 5 seconds.
- 3 Press and hold  for 5 seconds to switch pairing mode on, then pair the headset with the second phone.
- 4 Switch the headset off and back on. The headset connects to both phones.

Handle calls from two phones

If your headset is connected to two phones, you can handle calls from both at the same time.


Continue an ongoing call, and decline a call on another phone

Press  twice.

End an ongoing call, and answer a call on another phone

Press .

Put an ongoing call on hold, and answer a call on another phone

Press and hold  for 2 seconds.

Switch between active and held calls

Press and hold  for 2 seconds.


End an ongoing call, and go back to a held call

Press .

If you redial or use voice dialling, the call is made on the phone you last used for a call with the headset.



Switch the voice prompts on or off

Voice prompts give you verbal feedback and instructions, for example, when pairing your device.

- 1 Make sure the headset is switched on and connected to your phone.
- 2 Press and hold  for 9 seconds. You hear a voice prompt.

When you switch the voice prompts off, a yellow indicator light flashes once. When you switch the voice prompts on, a green indicator light flashes once.

Clear the pairings

- 1 To switch the headset off, press and hold  for 5 seconds.
- 2 Press and hold  for 8 seconds. The headset beeps twice, and the red and green indicator lights alternate.
- 3 When the headset switches on, pairing mode is switched on automatically.

Product and safety information**Battery and charger information**

This device has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the device.

This device is intended for use when supplied with power from the following chargers: AC-3, AC-4, AC-5, AC-8, AC-11, AC-15, DC-4, and DC-9. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, X, AR, U, A, C, K, or B.

The battery can be charged and discharged hundreds of times, but it will eventually wear out.

Talk and standby times are estimates only. Actual times are affected by, for example, device settings, features being used, battery condition, and temperature.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Use the charger for its intended purpose only. Improper use or use of unapproved chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged charger. Only use the charger indoors.

Take care of your device

Handle your device, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, allow the device to dry.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials.

Crossed-out wheeled-bin symbol

The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information, see the product Eco profile at www.nokia.com/ecoprofile.

Copyright and other notices

DECLARATION OF CONFORMITY

CE 0560

Hereby, NOKIA CORPORATION declares that this BH-218 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at <http://www.nokia.com/global/declaration>.

© 2012 Nokia. All rights reserved.

Nokia, Nokia Connecting People and Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The availability of particular products may vary by region. Please check with your Nokia dealer for details. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

/Issue 1.0 EN