Nokia Bluetooth Mono Headset BH-310 User Guide

Introduction

About your headset

With the Nokia Bluetooth Mono Headset BH–310, you can handle calls hands-free, even when using two phones at the same time.

The surface of this product is nickel-free.



Warning:

This product may contain small parts. Keep them out of the reach of small children.

Parts of the product are magnetic. Metallic materials may be attracted to the product. Do not place credit cards or other magnetic storage media near the product, because information stored on them may be erased.

Read this user guide carefully before using the product. Also, read the user guide for the device that you connect to the product.

For more info, go to www.nokia.com/support.

About Bluetooth connectivity

You can use Bluetooth to make a wireless connection to other compatible devices, such as mobile phones.


Devices do not need to be in direct line-of-sight, but they must be within 10 meters (33 feet) of each other. The connection may be affected by obstructions such as walls or other electronic devices.



This device is compliant with Bluetooth Specification 3.0 + EDR supporting the following profiles: headset profile (1.1), handsfree profile (1.5). Check with the manufacturers of other devices to determine their compatibility with this device.

Get started

Keys and parts

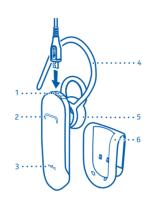

- Charger connector Multifunction key 1
- 2
- NFC area
- 4
- Earloop Earpiece 5
- Carrying clip



- 8 Car holder
- 9 Charger connector
- 10 Indicator light

Charge the battery

Before using the headset, you must charge the battery.

🔔 Warning:

Use only chargers approved by Microsoft Mobile for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. Use of unapproved chargers may present a risk of fire, explosion, or other hazard.

- 1 Plug the charger into a wall outlet.
- 2 Plug the charger to the charger connector on the headset or on the car holder. The red indicator light turns green when the battery is fully charged.
- 3 Unplug the charger from the headset or car holder, then from the wall outlet.

When you unplug a charger, hold and pull the plug, not the cord.

The fully charged battery has power for up to 5 hours of talk time and up to 114 hours of standby time. If you keep the headset in the clip, the standby time is up to 90 days.

When the battery charge is low, the red indicator light flashes, and you hear a voice prompt every 5 minutes. If you've switched voice prompts off, the headset beeps every 5 minutes.

Check the battery charge

When the headset is switched on and you're not in a call, press . A green light means there is enough power. If the light is yellow, you may need to recharge the battery soon. If the light is red, recharge the battery.

Switch the headset on or off

Switch on

Remove the headset from the clip or from the car holder. The headset beeps, and a green indicator light flashes once.

If you've never paired the headset with a phone, or you've cleared the pairings, pairing mode is switched on. Pair and connect the headset with your phone within 3 minutes.

If you've paired the headset before, it connects to the last phone it was used with. If the headset can't find that phone, it tries the next phone on its list of paired devices. If not connected to a phone within 30 minutes, the headset switches off.

Switch off

Put the headset in the clip. The headset beeps, and a red indicator light flashes once. All calls are ended.

Tip: Don't have the clip with you? To switch the headset off, press and hold \bigcap for 5 seconds. To switch the headset on, press \bigcap .

Wear the headset

Slide the earloop behind your ear, then gently push the earpiece against your ear. Point the headset toward your mouth.

Change the earplug

- 1 The headset comes with different-sized earpads. Select the earpad that fits the best, and is the most comfortable for your ear.
- 2 To change the earpad, pull the current earpad from the earpiece, and push the new earpad into place.

The headset is set up to be used on your right ear.

Use the headset on your left ear

Remove and attach the earloop so that it is to the left of \frown .

When you're not using your headset, keep it in the clip, or car holder.

Tip: Have your headset always at hand – clip it to your pocket as you would a pen.

Use the car holder

- 1 Make sure the surface of the car dashboard is dry and clean.
- 2 Remove the protective film from the bottom of the car holder.
- 3 Firmly press the car holder into place.



Tip: You can also charge your headset through the car holder. Use a compatible charger that uses the car cigarette lighter socket, and connect it to the holder.

Pair the device

Pair and connect the headset to your phone

Before using the headset, you must pair and connect it to a compatible phone.

You can pair your headset with 8 phones, but you can only connect it to a maximum of 2 phones at the same time.

With some phones, you may need to make the connection separately after pairing.

When the headset is connected to a phone, the Bluetooth indicator light flashes slowly.

Tip: Can't connect the headset to a compatible phone? Make sure that the headset is charged, switched on, and paired with the device.

Pair and connect the headset using NFC

With Near Field Communication (NFC), you can pair and connect your headset to your compatible phone easily.

If the compatible phone supports NFC, switch its NFC feature on, then switch the headset on, and touch the NFC area of the headset with the NFC area of your phone. The headset connects to the phone automatically.

You can also disconnect the headset using NFC. For details on NFC, see the user guide of the phone.



If the phone does not support NFC, pair the headset manually.

Pair the headset manually

- 1 Make sure your headset is switched off and your compatible phone is on.
- 2 If you've never paired the headset with a device, or you've cleared the pairings, switch the headset on.
 - If you've previously paired your headset with another device, press and hold for 5 seconds.
 - Pairing mode is switched on, and a blue indicator light starts to flash quickly.
- 3 Within 3 minutes, switch Bluetooth on in your phone, then set it to search for Bluetooth devices. For details, see the user guide of the phone.
- 4 On your phone, select the headset from the list of found devices.
- 5 If asked, type in the passcode **0000**.

In some devices, you may need to make the connection separately after pairing.

Pair and connect the headset to two devices

When you have paired and connected your headset with one phone, you can connect your headset to another phone, and manage calls from, for example, both your personal and your work phone at the same time.

- 1 Make sure Bluetooth is switched on in both phones.
- 2 To switch the headset off, press and hold \bigcap for 5 seconds.
- 3 Press and hold \bigcap for 5 seconds to switch pairing mode on, then pair the headset with the second phone.
- 4 Switch the headset off and back on. The headset connects to both phones.

Tip: If the other phone has NFC, just touch the NFC area of the headset with the NFC area of the phone.

Make calls

Make and receive calls

To make and receive calls using your headset, you need to connect it to your phone.

Make a call

Make a call in the normal way.

Answer a call

Remove the headset from the clip.

Tip: If the headset is not in the clip, press \frown .

Fnd a call

Put the headset in the clip.

Tip: To end a call, you can also press \(\capsilon \).

Decline a call

Press ☐ twice.

Switch a call between your headset and phone

Press and hold for 2 seconds.

When you're not in a call, you can redial the last called number or use voice dialing, if your phone supports these features with the headset.

Redial the last called number

Press ☐ twice.

Use voice dialing

Press and hold \frown for 2 seconds, then follow the instructions in the user guide of your phone.

Handle calls from two phones

If your headset is connected to two phones, you can handle calls from both at the same time.

Continue an ongoing call, and decline a call on another phone

Press Twice.

End an ongoing call, and answer a call on another phone

Press .

Put an ongoing call on hold, and answer a call on another phone

Press and hold T for 2 seconds.

Switch between active and held calls

Press and hold \bigcap for 2 seconds.

End an ongoing call, and go back to a held call

Press .

If you redial or use voice dialing, the call is made on the phone you last used for a call with the headset

Change the volume

Set the volume on your phone. That volume is used as the minimum level – if the background noise where you are increases or decreases, the headset changes the volume to compensate.

Settings

Switch the voice prompts on or off

Get verbal feedback and instructions, for example, when pairing your device.

- 1 Make sure the headset is switched on and in pairing mode. To switch pairing mode on, switch the headset off, then press and hold of for 5 seconds.
- 2 Press and hold for 2 seconds. You hear a voice prompt.

When you switch the voice prompts off, a yellow indicator light flashes once. When you switch the voice prompts on, a green indicator light flashes once.

Clear the pairings

- 1 To switch the headset off, press and hold for 5 seconds.
- 2 Press and hold \(\sigma \) for 9 seconds. The headset beeps twice, and the red and green indicator lights alternate.
- 3 When the headset switches on, pairing mode is switched on automatically.

Product and safety information

Driving safety

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. Only use the car holder if it is safe to do so under all driving conditions.

When you install the car holder in a car, make sure it does not interfere with or hinder the steering or braking systems or other systems used in the operation of the vehicle (for example, airbags) or disturb your field of vision while driving.

Check that the deployment of the airbag is not blocked or impaired in any way. Make sure that the car holder is not installed where you might come in contact with it in the event of an accident or collision.

Battery and charger information

This device has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the device.

This device is intended for use when supplied with power from the following chargers: DC-6. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, X, AR, U, A, C, K, or B.

The battery can be charged and discharged hundreds of times, but it will eventually wear out.

Talk and standby times are estimates only. Actual times are affected by, for example, device settings, features being used, battery condition, and temperature.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15° C and 25° C (59° F and 77° F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household garbage.

Use the charger for its intended purpose only. Improper use or use of unapproved chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the charger is damaged, take it to a service center for inspection before continuing to use it. Never use a damaged charger. Only use the charger indoors.

Take care of your device

Handle your device, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, allow the device to dry.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.

- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form
 inside the device and damage electronic circuits.
- · Do not attempt to open the device.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog moving parts and prevent proper operation.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled garbage disposal and promote the recycling of materials. Check how to recycle your products at www.nokia.com/recycling.

Copyright and other notices

DECLARATION OF CONFORMITY

Hereby, Microsoft Mobile Oy declares that this BH-310 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

C€0979

TM © 2014 Microsoft Mobile. All rights reserved. Microsoft is a trademark of the Microsoft group of companies. Nokia is a registered trademark of Nokia Corporation. Third party products/names may be TM of respective owner.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Microsoft Mobile is prohibited. Microsoft Mobile operates a policy of continuous development. Microsoft Mobile reserves the right to make changes and improvements to any of the products described in this document without prior notice.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Microsoft Mobile is under license.

The contents of this document are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Microsoft Mobile reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Microsoft Mobile or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The availability of particular products may vary by region. Please check with your dealer for details. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses

and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television receiption, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Microsoft Mobile could void the user's authority to operate the equipment.

/Issue 1 1 FN-US